



EP-1600 PARTS LIST

ITEM	QTY	PART#	DESCRIPTION
2	1	E1600-02	Drive Pawl
3	1	E1600-03	Spring Drive Pawl
4	1	E1600-04	Tension Handle
5	1	E1600-05	Pawl Pin
6	1	E1600-06	Pinion Gear
7	1	E1600-07	Tension Gear
8	1	E1600-08	Bushing
9	1	E1600-09	Feedwheel Shaft
14	2	E1600-14	Hold Pawl
15	1	E1600-15	Gear Housing
16	2	E1600-16	Holding Pawl Spring
17	1	E1600-17	Pivot Pin
18	1	E1600-18	Feedwheel
19	1	E1600-19	Lift Arm
20	1	E1600-20	Spiral Pin
23	1	E1600-23	Base Roll Pin
24	1	E1600-24	Wear Plug
26	1	E1600-26	Base Spring
28	1	E1600-28	Base
29	1	E1600-29	Gear Housing Bushing
30	1	E1600-30	Set Screw
31	2	E1600-31	Retaining Ring
32	1	E1600-32	Gear Housing Washer
33	1	E1600-33	Gear Housing Screw