


EP-6250 PARTS LIST

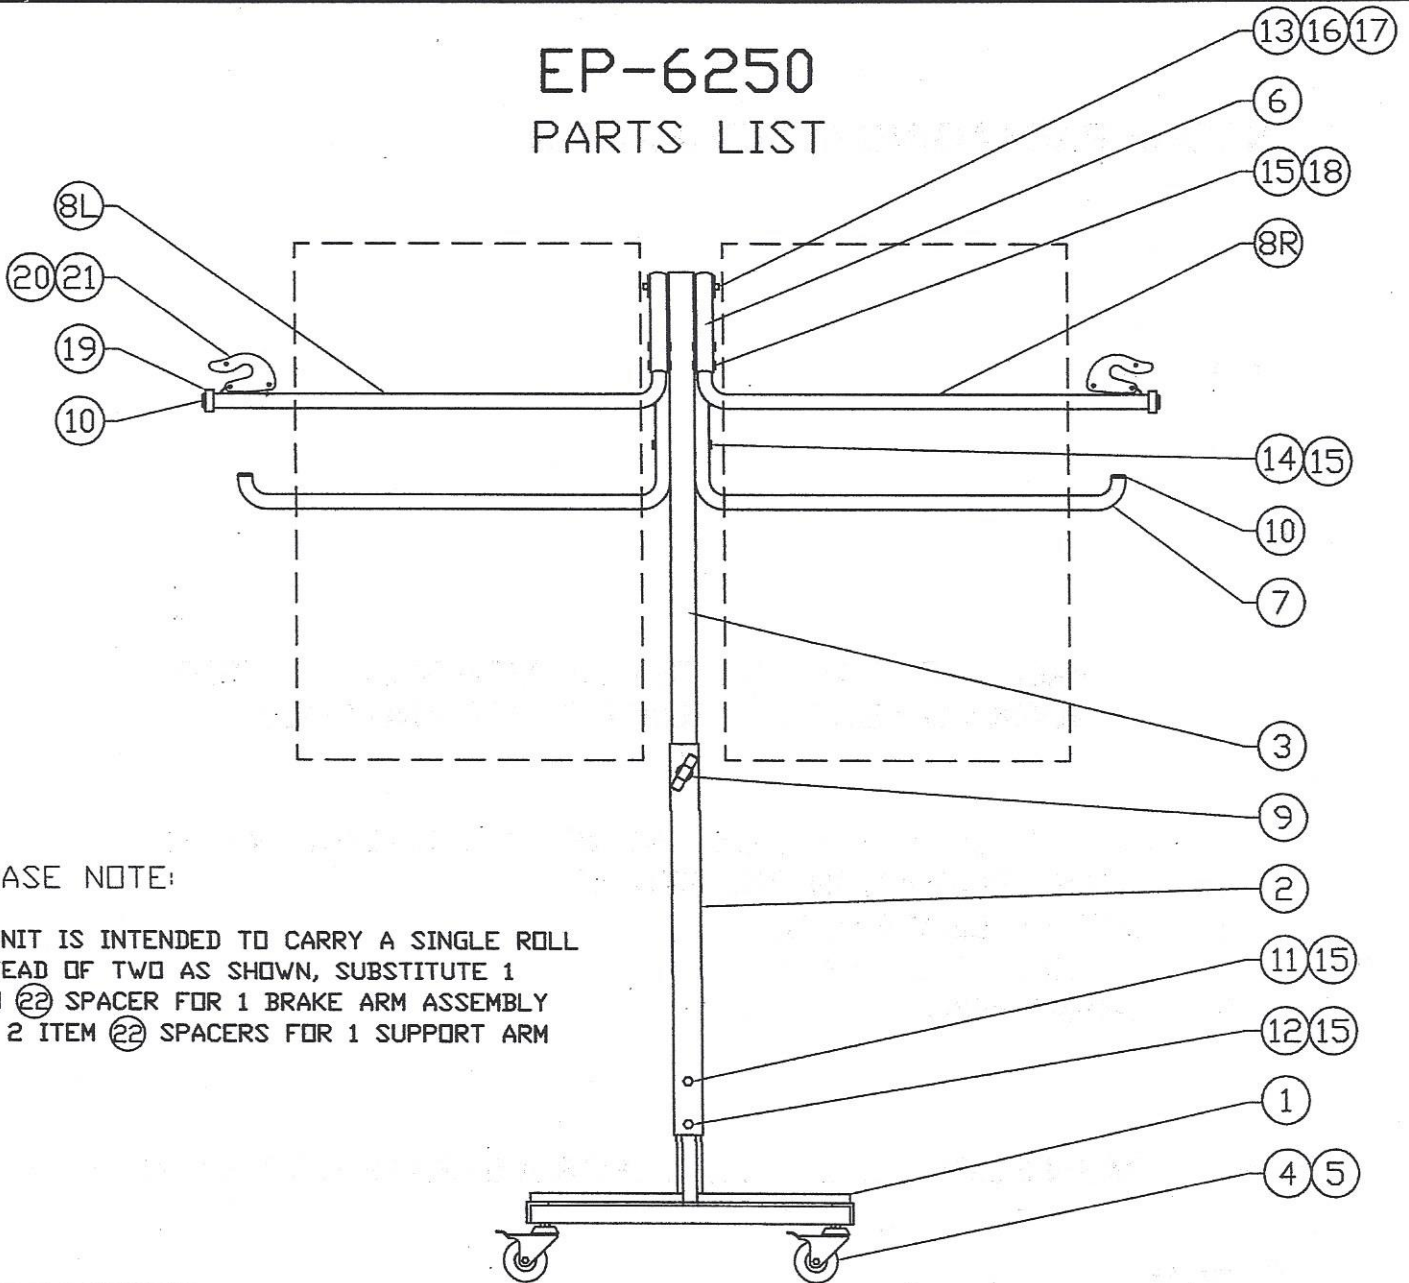

PLEASE NOTE:

IF UNIT IS INTENDED TO CARRY A SINGLE ROLL
INSTEAD OF TWO AS SHOWN, SUBSTITUTE 1
ITEM 22 SPACER FOR 1 BRAKE ARM ASSEMBLY
AND 2 ITEM 22 SPACERS FOR 1 SUPPORT ARM

Item	Description	Qty	Part #
1	BASE	1	E6250-01
2	LOWER MAST	1	E6250-02
3	UPPER MAST	1	E6250-03
4	CASTER	4	E6250-04
5	CASTER LOCKNUT	4	E6250-05
6	BRAKE ARM EXTENSION	2	E6250-06
7	SUPPORT ARM	2	E6250-07
8L	BRAKE ARM-LEFT SIDE	1	E6250-08L
8R	BRAKE ARM-RIGHT SIDE	1	E6250-08R
9	ADJUSTER	1	E6250-09
10	TUBE CAP	6	E6250-10
11	MAST ATTACHMENT SCREW	1	E6250-11

Item	Description	Qty	Part #
12	MAST ATTACHMENT BOLT	1	E6250-12
13	BRAKE ARM PIVOT SCREW	1	E6250-13
14	SUPPORT ARM BOLT	2	E6250-14
15	NUT	8	E6250-15
16	BRAKE ARM PIVOT NUT	1	E6250-16
17	BRAKE ARM PIVOT WASHER	4	E6250-17
18	BRAKE ARM EXT. BOLT	4	E6250-18
19	CUTTER COLLAR	2	E6250-19
20	CUTTER	2	E6250-20
21	CUTTER BLADE	2	E6250-21
22	SPACER	3	E6250-22

ITEMS DENOTED THUS ABC ARE MODEL SIZE SPECIFIC AND THE SIZE MUST BE GIVEN WHEN ORDERING THESE PARTS.

Always use proper lifting techniques, wear eye protection and
check to make sure all parts are properly serviced.