




EP-790

Assembly Instructions

INNOVATION IN PACKAGING TOOLS AND EQUIPMENT

Assembly is as easy as 1, 2, 3...

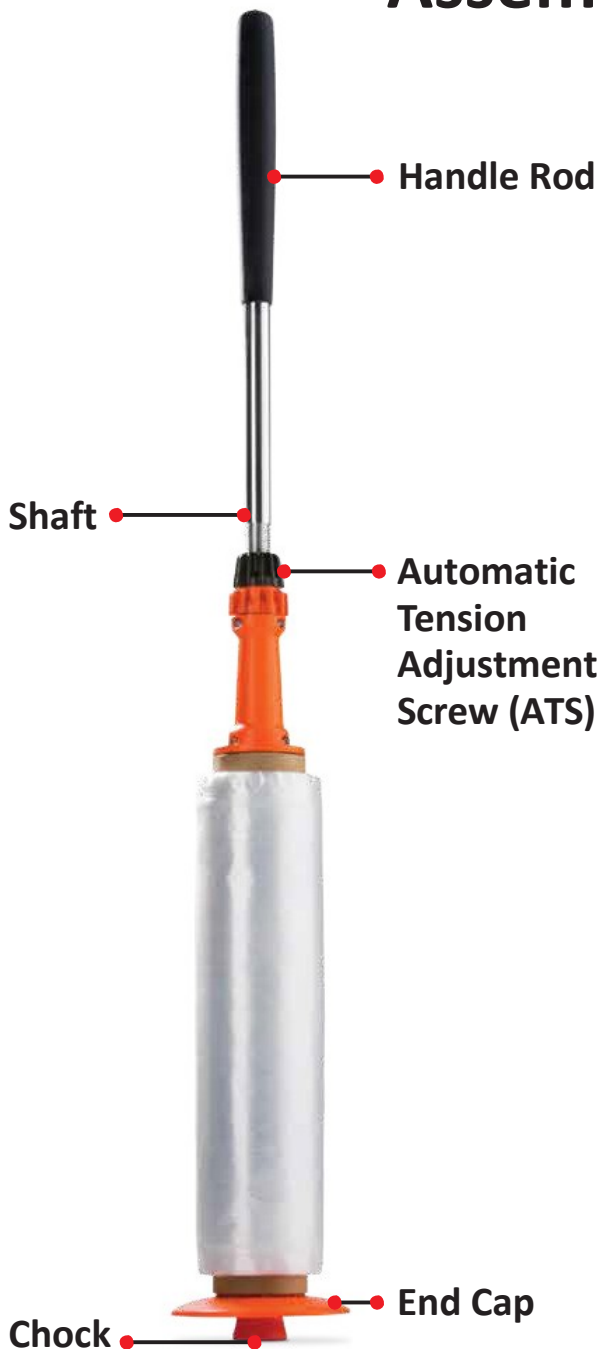

Insert Shaft into Handle Rod to approximate height of stretch film roll and secure with pin. Note that holes in shaft are spaced 1 inch apart.



Place stretch film roll over shaft and secure with End Cap. The dome of the End Cap should slide face down into the stretch film roll.



Slide Chock onto the end of the Shaft and give a quarter turn to lock in place. Fine tune the fit and tension with the Automatic Tension System Screw.

Note - When changing a roll, release the tension (by turning ATS) before turning the Choc