



Assembly Instructions


Components of the EP-5940 kraft paper dispenser.

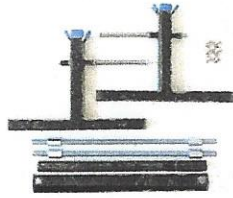

Insert threaded rods (#8) through the base support on each side and secure with threaded rod cap nuts (#11).

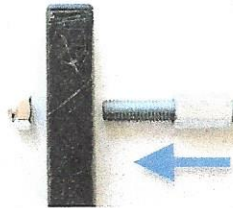

Tighten/Adjust hex bolts (#3) to proper position so welded assembly (#1) sits square.

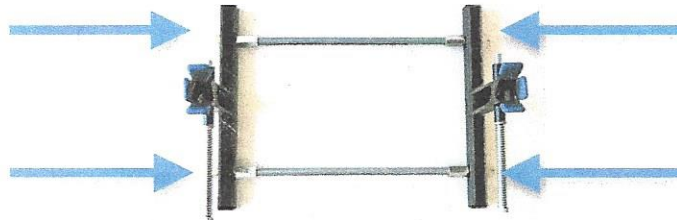

Attach paper strip (#7) to opposite ends of spring-loaded rods and secure with hex bolt cap nuts (#4).



Remove plastic core from kraft paper roll
Slide roll support (#6) through kraft paper and place into mounts while pushing paper strip (#7) forward.

